



## Setting Time-Code on the Panasonic AJ-HD3700 D-5

- Press: **Home**
- Press: **TC/CHR**
- Press: **F1 Button** (Source) to select **EXT** or **INT**
- Press: **Home** Button to exit
- Press: The unmarked button in the middle of the **Arrow Buttons** twice to highlight the first number. Then using the **Number Buttons**, enter the Time- Code.
- Press: **ENT** Button when done.

For more Tech-Tips like this one, visit <http://www.visionaryforces.com/>